



Installation Manual for M.2 SSD Covers

Our ssd covers are an aesthetic product, meaning they will not act as a heatsink. They are meant to cover the ugly stickers of the drives with something much better looking.

We, Coldzero, assume no liability whatsoever, expressed or implied, for the use of this product, nor it's installation. The following instructions are subject to change without prior notice.


Installation Process is very simple and shouldn't take more than 5 minutes to complete.

Included Accessories:
1x 2mm Black Nylon Spacer
1x M2x8 Black Screw



Step 1: Remove the stock screw of the drive, as we will be using a longer screw to fix it afterwards. Put the 2mm spacer between the SSD drive and the cover.

Step 2: Screw all the parts together with the longer screw we provided.

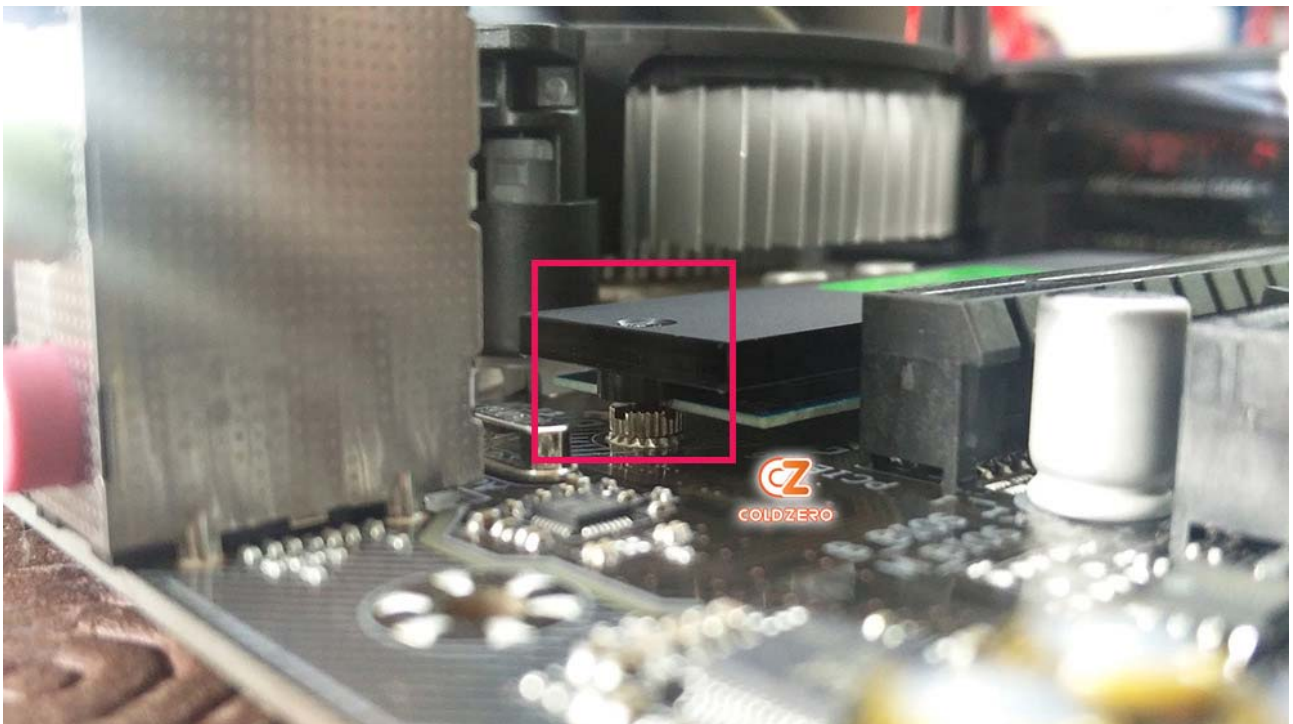

Step3: It is important that you push the spacer as far under the drive, to the right side, so that it stays under the M.2 Cover as much as possible. This is to avoid tilting of the cover. If when you tighten the cover it starts to rise a lot, loosen it, and push the spacer with your finger, so that it goes under the cover, then tighten again. The end result will be a flat cover over your drive.



If you have further questions/suggestions regarding the installation of the M.2 SSD Covers, please use the contact form in our website at: <https://www.coldzero.eu/contact-us>